

SUBJECT: Remote Membrane Switch Wrapping

Number: 2021-05.1
Product: CIM
Date Issued: May 2021
From: Technical Services

CIM ice makers – Cut an approximately 4” piece of insulation tape. Begin by sticking the tape to the back of the connector. The insulation should be positioned to the individual wires from the wire harness so not to be exposed (see Figure 2). Fold over the insulation tape so that the seam is below the connector, on the bottom – Pinch both ends closed, so there are no gaps (see Figure 3).

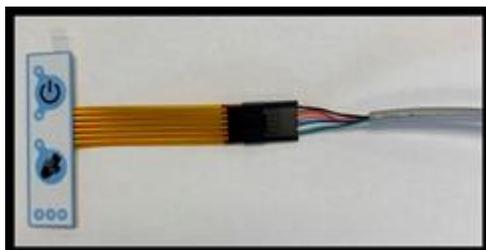


Figure 1: Membrane Switch and Connector

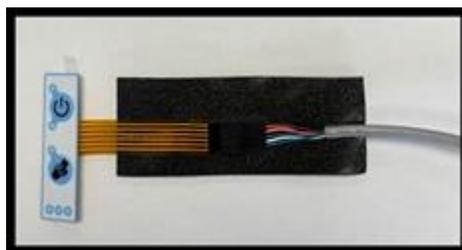


Figure 2: Position Membrane Switch



Figure 3: Wrapped Membrane Switch with Pinched Ends, Eliminating All Gaps